

Agilent 8614xB Optical Spectrum Analyzer Family Technical Specifications

June 2005

- **Filter Mode**
Enables you to drop a single DWDM channel or measure time resolved chirp (TRC) and calculate dispersion penalty (DPC).
- **Excellent "Close-In" Dynamic Range**
Accurately characterize 50 GHz WDM system performance
- **High Throughput**
Fast sweep speeds at high sensitivity to maximize measurement throughput
- **Built-In Applications**
Agilent's powerful application concept makes complex and repetitive measurements simple
- **Benchtop and Portable Platforms**
Choose between a large screen or small footprint package



	Benchtop	Portable
Ideal for critical WDM system and component characterization	Agilent 86142B	Agilent 86145B
Ideal for a wide range of applications at value prices		Agilent 86143B
Features filter mode, single mode monochromator output	Agilent 86146B	

Agilent Technologies offers a wide variety of optical spectrum analyzers (OSA) to meet your test needs whether it's in R&D, manufacturing, installation, or maintenance and commissioning. Both benchtop and portable models are available at different price and performance points so you can choose the most cost effective solution to meet your test needs.

Specifications

Characteristics and Specifications

The distinction between specifications and characteristics is described as follows:

- Specifications describe warranted performance.
- Characteristics provide useful, but non-warranted information about the functions and performance of the instrument.

The **specifications** apply to all functions auto coupled over the temperature range 0 to 55° C and relative humidity <95% (unless otherwise noted).

All specifications apply after the instrument's temperature has been stabilized after 1 hour continuous operation and the auto-align routine has been run. Unless otherwise noted, specifications apply without USER CAL.

The 86146B specifications are for the 50 µm internal path only.

T(#) indicates temperature range and dependence.

Wavelength	Agilent 8614xB	Notes
Range	600 nm to 1700 nm	
Reproducibility	±0.002 nm	With applied input fiber 9/125 µm; ≤ 1 min
Span Range	0.2 nm to full range and zero span	
Accuracy After calibration with internal source and with enhanced wavelength calibration for specified range. 1480-1570 nm 1570-1620 nm	Typ ±0.01 nm Typ ±0.025 nm	At room temp; with applied input fiber 9/125 µm
After calibration with external reference source(s) ±10 nm of calibration reference point(s)	Typ ±0.01 nm	At room temp, with applied input fiber 9/125 µm
After user calibration over full wavelength range (600-1700 nm)	±0.2 nm	T(20-30°C), with applied input fiber 9/125 µm
Absolute Accuracy	±0.5 nm	Factory cal. 2 yr. cycle; T(20-30°C); with applied input fiber 9/125 µm
Tuning Repeatability	±0.002 nm	With applied input fiber 9/125 µm; ≤ 1 min
Span Linearity 1525-1570 nm for spans <40 nm	Typ ±0.01 nm, Typ ±0.02 nm	T(20-30°C); with applied input fiber 9/125 µm

Resolution Bandwidth (RBW)	Agilent 86142B, 86143B, 86145B	Agilent 86146B	Agilent 86143B w/Opt 025	Notes
FWHM (3 dB Bandwidth)	0.06, 0.1, 0.2, 0.5, 1, 2, 5, 10 nm	0.06, 0.07, 0.1, 0.14, 0.2, 0.33, 0.5, 1, 2, 5, 10 nm	0.07, 0.1, 0.2, 0.5, 1, 2, 5, 10 nm	Resolution of 10 nm is available for first order grating response only; with applied input fiber 9/125 µm
Noise Marker Bandwidth Accuracy using noise markers 1525-1610 nm ≥0.5 nm 0.2 nm 0.1 nm 0.06 nm	±2% ±3% ±7% ±12%		±3% ±5% ±10% —	T(20-30°C)

Amplitude	Agilent 8614xB			Notes
Sensitivity				Sensitivity is defined as signal value > 6 x RMS noise value.
600-750 nm	-60dBm			T(0-30°C), 2 nd order
750-900 nm	-75 dBm			
900-1250 nm	-75 dBm			T(0-30°C)
1250-1610 nm	-90 dBm			
1610-1700 nm	-80 dBm			T(20-30°C)
Maximum Measurement Power				Resolution bandwidth setting < channel spacing.
1525-1700 nm	Typ +15 dBm per channel, +30 dBm total			
600-1000 nm	Typ +15 dBm per channel, +30 dBm total			
1000-1525 nm	Typ +12 dBm per channel, +30 dBm total			
Maximum Safe Power				
Total safe power	+30 dBm			
Total power within any 10 nm portion of the spectrum	+23 dBm			
Absolute Accuracy at -20dBm, 1310 nm/1550 nm	± 0.5 dB			For resolution ≥ 0.1 nm, with applied input fiber 9/125 μm
Scale Fidelity				Excluding amplitude errors at low power levels due to noise,
Autorange off	± 0.05 dB			T(20-30°C), with applied input fiber 9/125 μm
Autorange on	± 0.07 dB			
Display Scale (log scale)	0.01-20 dB/DIV, -120 to +90 dBm			
Amplitude Stability (1310 nm, 1550 nm), 1 minute	±0.01 dB			For signals within 8 dB of top of screen, with applied input fiber 9/125 μm
15 minutes	±0.02 dB			Typ., with applied input fiber 9/125 μm
Flatness	Agilent 86143B	Agilent 86142B, 86145B, 86146B	Agilent 86143B w/Opt 025	With applied input fiber 9/125 μm
1290-1330 nm	—	±0.2 dB	—	
1525-1570 nm	±0.2 dB	—	±0.2 dB	
1525-1610 nm	—	±0.2 dB	—	
1250-1610 nm	—	±0.7 dB	—	Absorption of light by atmospheric moisture affects flatness at 1350-1420 nm
Polarization Dependence				For resolution ≥0.2 nm, at room temp, with applied input fiber 9/125 μm
1310 nm	±0.25 dB	±0.12 dB		
1530 nm, 1565 nm	±0.2 dB	±0.05 dB		
1600 nm	±0.25 dB	±0.08 dB		
1250-1650 nm	±0.3 dB	±0.25 dB	±0.5 dB	

Dynamic Range	Agilent 86143B	Agilent 86142B, 86145B, 86146B	Agilent 86143B w/Opt 025	Notes
In 0.1 nm Resolution Bandwidth				Excluding multiple order grating response, With applied input fiber 9/125 μ m
1250-1610 nm (chop mode on) ± 0.5 nm, ± 1 nm, ± 5 nm	Typ -70 dB			Chop mode not available on the 86146B model
1550 nm at ± 0.8 nm (± 100 GHz at 1550 nm) at ± 0.5 nm (± 62.5 GHz at 1550 nm) at ± 0.4 nm (± 50 GHz at 1550 nm) at ± 0.2 nm (± 25 GHz at 1550 nm)	Typ. -58 dB Typ. -55 dB Typ -40 dB	-60 dB -58 dB -55 dB	Typ -55 dB Typ -52 dB —	Average of all states of polarization
Monochromator Input	Agilent 8614xB			Notes
Input Return Loss Straight connector (9/125 μ m)	>35 dB			Depends on the quality of the attached connector; With applied 9/125 μ m straight connector

Sweep	Agilent 8614xB	Notes
Max. Sweep Rate	Typ 40 nm/56.3 ms	
Max. Sampling Rate in Zero Span	Typ 50 μ s/trace point	
Sweep Cycle Time 50 nm span, auto zero off 50 nm span, auto zero on 100 nm span 500 nm span	Typ < 180 ms Typ < 340 ms Typ < 400 ms Typ < 650 ms	
ADC Trigger Accuracy Jitter (distributed uniformly) Trigger delay range	Typ < ± 0.5 μ s Typ 2 μ s-6.5 ms	

Pulse Mode Accuracy	Agilent 86143B	Agilent 86142B, 86145B, 86146B	Agilent 86143B w/Opt 025	Notes
Turn On (≥ 2 μ s after rising edge)	Typ $\leq \pm 0.2$ dB			(starting from dark)
Turn Off (≥ 10 μ s after falling edge)	Typ $\leq \pm 0.2$ dB	$\leq \pm 0.2$ dB (30 dB extinction)	Typ $\leq \pm 0.2$ dB	

Computer Interfacing	Agilent 8614xB	Notes
Remote Control	Web enabled controls	
Compatibility	IEEE-488.1, IEEE-488-2 (100%)	
Interfaces	LAN, GPIB, Parallel Printer Port, External VGA Monitor, Keyboard and Mouse (PS/2)	
Floppy Disk	3,5" 1.44 MB, MS-DOS	MS-DOS is a U.S. registered trademark of Microsoft Corporation
Data export	Spreadsheet and Word Processor Compatible (CSV ASCII)	
Graphics export	CGM, PCL, GIF	
Instrument Drivers	Universal Instrument Drivers (PNP), Compatible with VEE, Labview, Visual Basic and C++	Labview is a U.S. registered trademark of National Instruments.

General Specifications	Benchtop OSA Agilent 86142B, 86146B	Portable OSA Agilent 86143B, 86145B
Dimensions	222mm high x 425mm wide x 427 mm long	163mm high x 325mm wide x 427 mm long
Weight	16.5 Kg	14.5 Kg
Environmental Temperature* Humidity EMI	Operating 0°C to 55°C, Storage -40°C to 70°C Operating <95% RH, Storage: Noncondensing Conducted and radiated interference is in compliance with CISPR pub 11, IEC 801-3, IEC 801-4 and IEC 555-2	
Power Requirements Voltage and frequency Maximum power consumption	90 Vac to 260 Vac, 44 to 444 Hz 230W	

*Floppy disk and printer operating temperature range 0°C to 45°C

Additional Specifications: Agilent 86146B (for 9µm filter mode only)

Insertion Loss Stability

1550 nm, 15 minutes	0.5 dB	Immediately following enhanced single point auto align, at constant temperature
---------------------	--------	---

Insertion Loss

1550 nm	Typ. 10 dB max	At room temperature
---------	----------------	---------------------

Filter Bandwidth: (From 1530 nm to 1610 nm)

	0.5 dB	1.0 dB	3.0 dB
RBW Nominal Setting	Actual Bandwidth		
0.04 nm	Typ 0.016	Typ 0.023	Typ 0.039
0.05 nm	Typ 0.019	Typ 0.026	Typ 0.045
0.07 nm	Typ 0.033	Typ 0.044	Typ 0.063
0.1 nm	Typ 0.076	Typ 0.089	Typ 0.115
0.2 nm	Typ 0.134	Typ 0.147	Typ 0.173
0.3 nm	Typ 0.257	Typ 0.270	Typ 0.297
0.5 nm	Typ 0.421	Typ 0.434	Typ 0.460
	±20%		

Filter Bandwidth: Adjacent Channel Rejection (at 1550 nm)*

	12.5 GHz	25 GHz	50 GHz	100 GHz
	±0.1 nm	±0.2 nm	±0.4 nm	±0.8 nm
0.04 nm	Typ 40 dB	Typ 50 dB	Typ 55 dB	Typ 55 dB
0.05 nm	Typ 40 dB	Typ 50 dB	Typ 55 dB	Typ 55 dB
0.07 nm	N/A	Typ 50 dB	Typ 55 dB	Typ 55 dB
0.1 nm	N/A	Typ 40 dB	Typ 50 dB	Typ 55 dB
0.2 nm	N/A	Typ 40 dB	Typ 45 dB	Typ 55 dB
0.3 nm	N/A	N/A	Typ 45 dB	Typ 55 dB
0.5 nm	N/A	N/A	Typ 45 dB	Typ 50 dB

*Adjacent Channel Rejection limited to 60 dB below total integrated power

Filter Bandwidth: Polarization Dependence

1550 nm	Typ ±0.2 dB	for 0.2 nm filter bandwidth and greater, at room temperature
---------	-------------	--



Options and Accessories

Options (available on new instruments only)	Benchtop OSA Agilent 86142B, 86146B	Portable OSA Agilent 86143B, 86145B
Multimode Fiber Interface (50µm)	—	86143B #025
Current Source	8614xB-001	—
White Light Source *	8614xB-002	—
Built-in 1310 & 1550 nm EELED Source *	8614xB-004	—
Wavelength Calibrator	8614xB-006	8614xB-006
DWDM Spectral Analysis Application	Included	Included
Passive Component Test Application	Included	Included
Amplifier Test Application	Included	Included
Source Test Application	Included	Included
Connector Interface	FC/PC: 81000PI SC/PC: 81000KI DIN: 81000SI ST: 81000VI	
Certificate of Calibration	Included	Included

* 8614xB-002 and 004 are exclusive.

OSA Fiber Sizes

Model Number	Optical Input	8614xB-002* (White Light Source)	8614xB-004* (1310/1550 EELED)	8614xB-006 (Calibrator)	Photodiode Input	Mono Output 1
86143B-025	50 µm	N/A		9 µm	N/A	
86143B	9 µm	N/A			N/A	
86145B		N/A			N/A	
86142B		N/A			N/A	
86146B		62.5 µm	9 µm		50 µm	9 µm

* 8614xB-002 and 004 are exclusive.

Options and Accessories: Specifications

8614xB-001 Current Source	Benchtop OSA Agilent 86142B, 86146B
Range	0 to ± 200 mA (source or sink)
Resolution	Typ 50 μ A steps
Accuracy	2% ± 50 μ A
Clamp Voltage (nominal)	± 2.7 V
Noise Density at 1 kHz	Typ < 4 nA/ $\sqrt{\text{Hz}}$
Stability Within 30 Minutes	Typ < 100 ppm ± 500 nA
Temperature Drift	Typ $< (100 \text{ ppm } \pm 500 \text{ nA})/K$
Pulse Mode	
Pulse Range	10 μ s to 6.5 ms
Pulse Resolution	100 ns
Duty Cycle Range	Pulse width/1 s to 100%

8614xB-002 White Light Source	
Wavelength*	900 nm to 1700 nm
Minimum Output Power Spectral Density** (9/125 μ m fiber) 900 to 1600 nm 900 to 1600 nm 1600 to 1700 nm	 -67 dBm/nm (0.2 nW/nm) Typ -64 dBm/nm (0.4 nW/nm) -70 dBm/nm (0.1 nW/nm)
Minimum Output Power Spectral Density*** 50/125 μ m fiber 62.5/125 μ m fiber	 Typ -50 dBm/nm (10 nW/nm) Typ -46 dBm/nm (25 nW/nm)
Output Stability**	Typ ± 0.02 dB over 10 minutes
Lamp Lifetime, Mean Time Between Failures** (MTBF)	Typ > 5000 hours

* filtered below 850 nm.

** with applied input fiber 9/125 μ m

*** Typ; includes power in full numerical aperture of fiber.

8614xB-004 EELED Sources	
Minimum Spectral Power Density 1300 to 1320 nm, 1540 to 1560 nm 1250 to 1620 nm	 > -40 dBm/nm (10nW/nm) Typ > -60 dBm/nm (1nW/nm)
Return Loss With straight connector	Typ > 25 dB
Stability (ambient temp. $< \pm 1^\circ\text{C}$) Over 15 minutes Over 6 hours	 Typ $< \pm 0.02$ dB Typ $< \pm 0.05$ dB

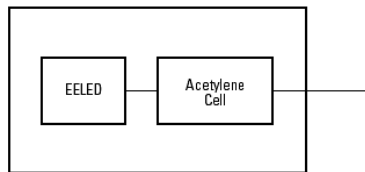


Figure 1. Wavelength calibrator block diagram

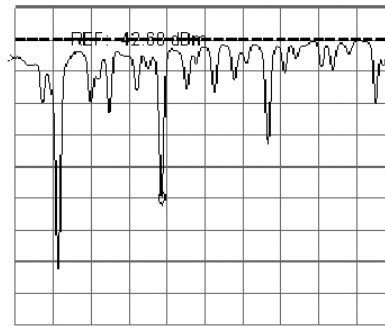


Figure 2. Wavelength calibrator absorption spectrum

The wavelength calibrator option provides an onboard wavelength reference that can be used to automatically calibrate the optical spectrum analyzer. The calibrator is based on an EELED and an Acetylene gas absorption cell, Figure 1. The Acetylene absorbs light at very specific wavelengths based on the molecular properties of gas. The cell is illuminated by an EELED and the OSA uses the absorption pits to perform a wavelength calibration, Figure 2. Since the absorption of the Acetylene gas is a physical constant it never needs calibrating.

The wavelength calibrator enhances the OSA to achieve better than ± 10 pm wavelength accuracy and removes the need to use a tunable laser source and multi-wavelength meter as an external reference.

Additional Parts and Accessories	Benchtop OSA Agilent 86142B, 86146B	Portable OSA Agilent 86143B, 86145B
Printer Paper (5 rolls / box)	9270-1370	9270-1370
Additional Connector Interfaces	See Agilent 81000 series	See Agilent 81000 series
9 μm Single Mode Connector Saver	Standard	Standard
Rack-mount Flange Kit	8614xB-AX4	N/A
Transit Case	9211-2657	9211-5604
Soft Carrying Case	N/A	8614xB-042
BenchLink Lightwave Software*	Standard	Standard

* Agilent N1031A BenchLink Lightwave allows transfer of measurement results over a GPIB Interface to a PC for the purposes of archiving, printing and further analysis

Definition of Terms

Wavelength

- Absolute Accuracy (after user cal) refers to the wavelength accuracy after the user has performed the internal wavelength calibration using a source of known wavelength.
- Reproducibility refers to the amount of wavelength drift, which can occur over the specified time while the OSA is swept across a source of known wavelength.
- Tuning Repeatability refers to the wavelength accuracy of returning to a wavelength after having tuned to a different wavelength.

Resolution

- FWHM refers to the Full-Width-Half-Maximum resolutions that are available. This indicates the width at half power level of the signal after passing through the resolution slits.

Amplitude

- Scale Fidelity refers to the potential errors in amplitude readout at amplitudes other than at the calibration point. This specification is sometimes called linearity.
- Flatness defines a floating band, which describes the error in signal amplitude over the indicated wavelength range. (This error may be removed at a given wavelength by performing the user amplitude calibration).
- Polarization Dependence refers to the amplitude change that can be seen by varying the polarization of the light entering the OSA. This is not to be confused with amplitude variations caused by the varying distribution of energy between the different modes in fiber that are multimode at the wavelength of interest.

Sensitivity

- Sensitivity is defined as the signal level that is equal to six times the RMS value of the noise. Displayed sensitivity values are nominal. Slightly lower values may have to be entered to achieve specified sensitivity.

Dynamic Range

- Dynamic Range is a measure of the ability to see low-level signals that are located very close (in wavelength) to a stronger signal. In electrical spectrum analyzers, this characteristic is generally called shape factor.

Sweep Time

- Maximum Sweep Rate refers to the maximum rate that the instrument is able to acquire data and display it. This rate may be limited by multiple internal processes when using default number of trace points.
- Sweep Cycle Time refers to the time required to make a complete sweep and prepare for the next sweep. It can be measured as the time from the start of one sweep to the start of the next sweep.

Agilent Technologies Test and Measurement Support, Services, and Assistance

Agilent Technologies aims to maximize the value you receive, while minimizing your risk and problems. We strive to ensure that you get the test and measurement capabilities you paid for and obtain the support you need. Our extensive support resources and services can help you choose the right Agilent products for your applications and apply them successfully. Every instrument and system we sell has a global warranty. Support is available for at least five years beyond the production life of the product. Two concepts underlie Agilent's overall support policy: "Our Promise" and "Your Advantage."

Our Promise

Our Promise means your Agilent test and measurement equipment will meet its advertised performance and functionality. When you are choosing new equipment, we will help you with product information, including realistic performance specifications and practical recommendations from experienced test engineers. When you use Agilent equipment, we can verify that it works properly, help with product operation, and provide basic measurement assistance for the use of specified capabilities, at no extra cost upon request. Many self-help tools are available.

Your Advantage

Your Advantage means that Agilent offers a wide range of additional expert test and measurement services, which you can purchase according to your unique technical and business needs. Solve problems efficiently and gain a competitive edge by contracting with us for calibration, extra-cost upgrades, out-of-warranty repairs, and on-site education and training, as well as design, system integration, project management, and other professional engineering services. Experienced Agilent engineers and technicians worldwide can help you maximize your productivity, optimize the return on investment of your Agilent instruments and systems, and obtain dependable measurement accuracy for the life of those products.

By Internet, phone, or fax, get assistance with all your test & measurement needs

Online assistance:

www.agilent.com/comms/lightwave

Related Agilent Literature

<http://www.agilent.com/comms/octspectral>

Phone or Fax

United States:

(tel) 1 800 829 4444

(fax) 1 800 829 4433

Canada:

(tel) 1 877 894 4414

(fax) 1 800 746 4866

Europe:

(tel) +31 20 547 2111

(fax) +31 20 547 2190

Japan:

(tel) 120 421 345

(fax) 120 421 678

Latin America:

(tel) +55 11 4197 3600

(fax) +55 11 4197 3800

Australia:

(tel) 800 629 485

(fax) 800 142 134

Asia Pacific:

(tel) +852 800 930 871

(fax) +852 800 908 476

Product specifications and descriptions in this document subject to change without notice.

Copyright © 2005 Agilent Technologies

June 05, 2005

5980-0177E



Agilent Technologies